


BOOMERANG BAGS INSTRUCTIONS

CUT


- **Handles** x 2 80cm x 12cm (Approx. 32" x 5")
- **Bag** x 1 91cm x 42cm (Approx. 36" x 16")
- **Pocket** x 1 23cm x 21cm (Approx. 9" x 8") * stencilled pocket material provided

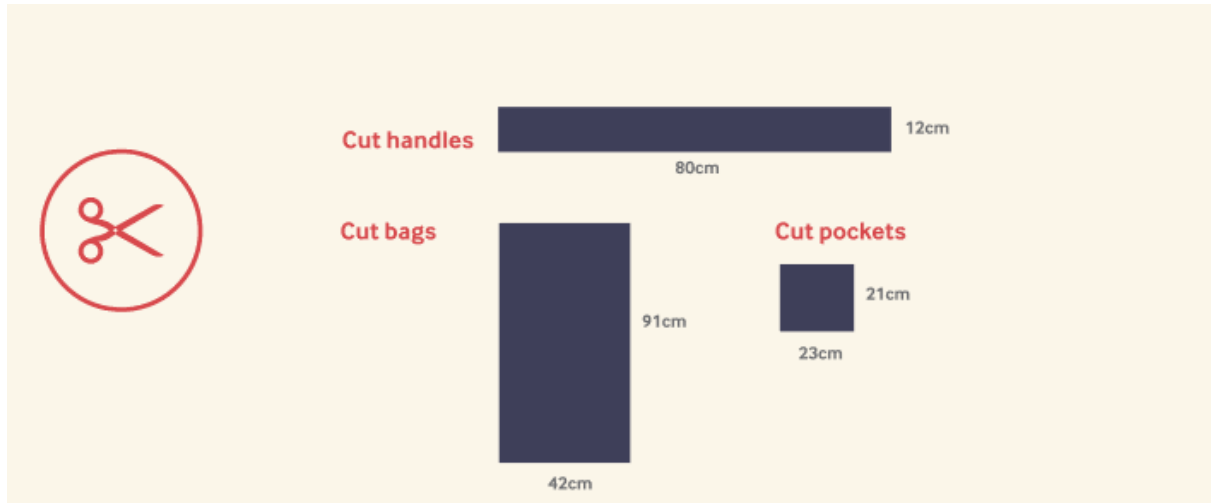

Note: These measurements do not have to be exact, it will not matter if the bags are a little larger (better than wasting material)

IRON

- **Handles** in half lengthways, then iron outside edges in to middle fold line.
- **Pocket** in 1cm all around then on top shorter side another 1cm to make pocket hem.

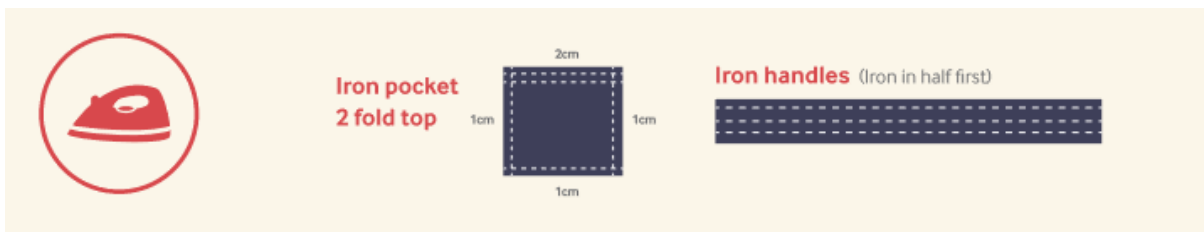

PIN & SEW

- Pin and sew pocket (if available) on centre of front of bag.



- Sew down both sides of handles, approx 1/8 to 1/4 inch from edges and pin to ends of bag on right side of material, about 9cm (3 1/2 inches) from the sides.




- Overlock (or zigzag) ends of bag, thereby securing handles in place.
- Form bag (handles on the inside) and sew and overlock sides.



- Box Corners (mitre)



- Turn over top of bag approx 1" sew hem and also around top edge.

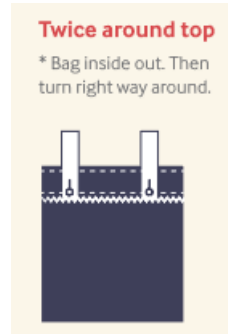

Note: A loop (using scrap or used binding) is useful to sew on so bags can be held open when used at the checkout. * Attach when doing top hem of bag.

If you are having trouble following these instructions, please give me a call on 0427645713 and I will endeavour to help. Thank you Susan.